 **TheGreenBow IPSec VPN Client**
Configuration Guide
Ingate Firewall

WebSite: <http://www.thegreenbow.com>

Contact: support@thegreenbow.com

Table of contents

1	Introduction	3
1.1	Goal of this document	3
1.2	VPN Network topology	3
1.3	INGATE FIREWALL VPN Gateway	3
2	INGATE FIREWALL VPN configuration	4
2.1	Use the INGATE FIREWALL to create the client certificate	4
2.2	Extract the pkcs12 files with certificate.exe	Fel! Bokmärket är inte definierat.
2.3	Configuration of the Client "Phase 1"	5
2.4	Certificates Import	6
2.5	Advanced (important!)	8
2.6	Add "Phase 2"	8
2.7	Open IPSec VPN tunnels	9
3	Tools in case of trouble	11
3.1	A good network analyser: ethereal	11
4	VPN IPSec Troubleshooting	12
4.1	« PAYLOAD MALFORMED » error (wrong Phase 1 [SA])	12
4.2	« INVALID COOKIE » error	12
4.3	« no keystate » error	12
4.4	« received remote ID other than expected » error	12
4.5	« NO PROPOSAL CHOSEN » error	13
4.6	« INVALID ID INFORMATION » error	13
4.7	I clicked on "Open tunnel", but nothing happens	13
4.8	The VPN tunnel is up but I can't ping !	13
5	Contacts	15


1 Introduction

1.1 Goal of this document

This configuration guide describes how to configure TheGreenBow IPsec VPN Client with a INGATE FIREWALL VPN router.

1.2 VPN Network topology

In our VPN network example (diagram hereafter), we will connect TheGreenBow IPsec VPN Client to the LAN behind the INGATE FIREWALL router. The VPN client is connected to the Internet with a DSL connection or through a LAN. All the addresses in this document are given for example purpose.

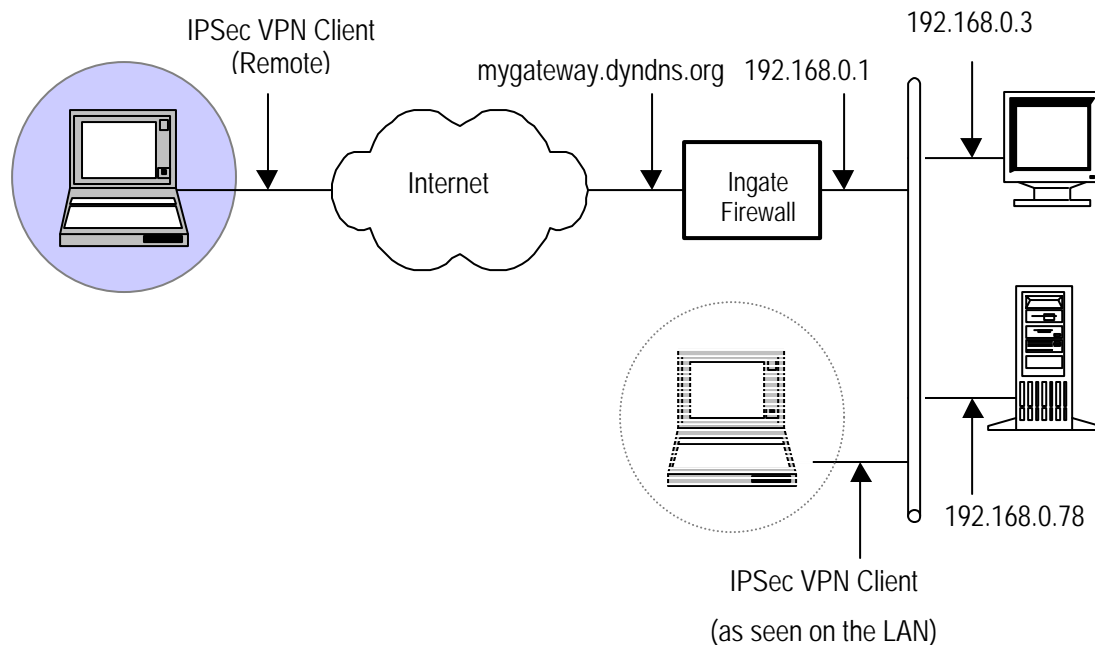

1.3 INGATE FIREWALL VPN Gateway

Our tests and VPN configuration have been conducted with INGATE FIREWALL firmware release version 4.5.2.

1.4 The Greenbow version

This configuration document is made for The Greenbow VPN Client version 4.

	Doc.Ref	tgbvpn_ug_INGATE FIREWALL_en
	Doc.version	2.0 – Feb.2005
	VPN version	2.5x


2 INGATE FIREWALL VPN configuration

This section describes how to build an IPSec VPN configuration with your INGATE FIREWALL VPN router.

This document assumes that your Ingate Firewall is configured according to the examples available in the Ingate Firewall How To Guide, chapter 4, section "How to configure Ingate Firewall for IPsec connections from a road warrior".

2.1 Use the INGATE FIREWALL to create the client certificate

Create an X.509 certificate for the client on the Ingate Firewall (the client can't create certificates itself).

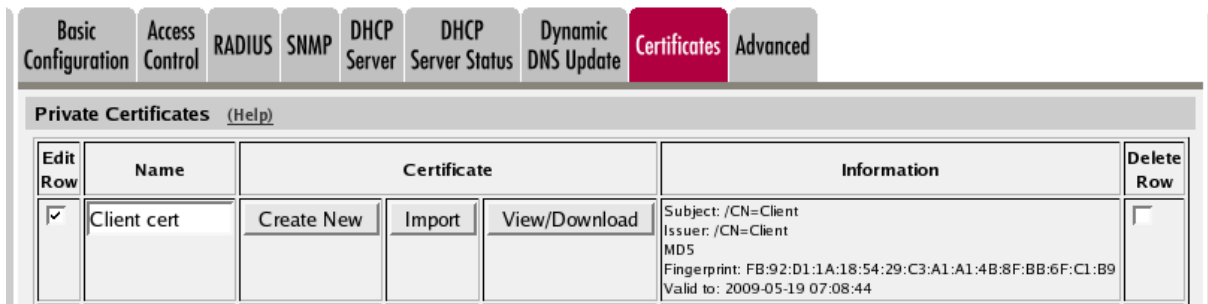

Export this as a PKCS12 file and name the file client.p12. Also download the certificate in PEM format and name it client.cer.



Export the Firewall's Private Certificate in PEM format and name it ingate.cer.



Transfer these files to the client computer.

Doc.Ref	tgvpn_ug_INGATE FIREWALL_en
Doc.version	2.0 – Feb.2005
VPN version	2.5x

2.2 Configuration of the Client "Phase 1"

Right click on "Configuration" and select "New Phase 1"

Name

Give this connection a suitable name

Interface

Leave as is (*) if no special configuration is needed

Remote Gateway


Enter your Firewalls outside address

Certificate

Select this option to use certificates

Preshared key


Preshared keys can't be used with Ingate Firewalls.

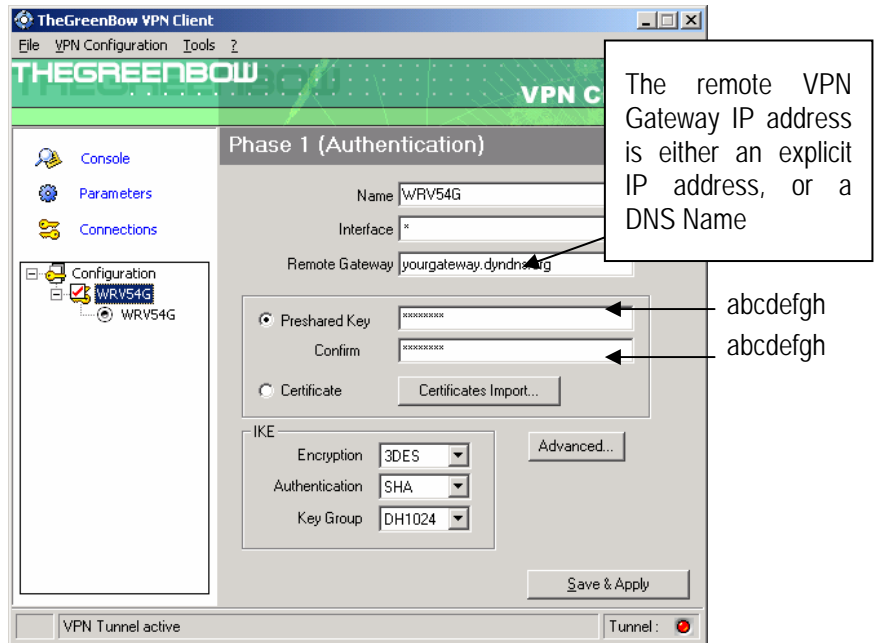

2.3 Certificates Import


Import a Root Certificate

Select "Certificate from a PEM file" and "Import a PEM Root Certificate" to import the firewall certificate to the client. Select the "ingate.cer" certificate you saved before.

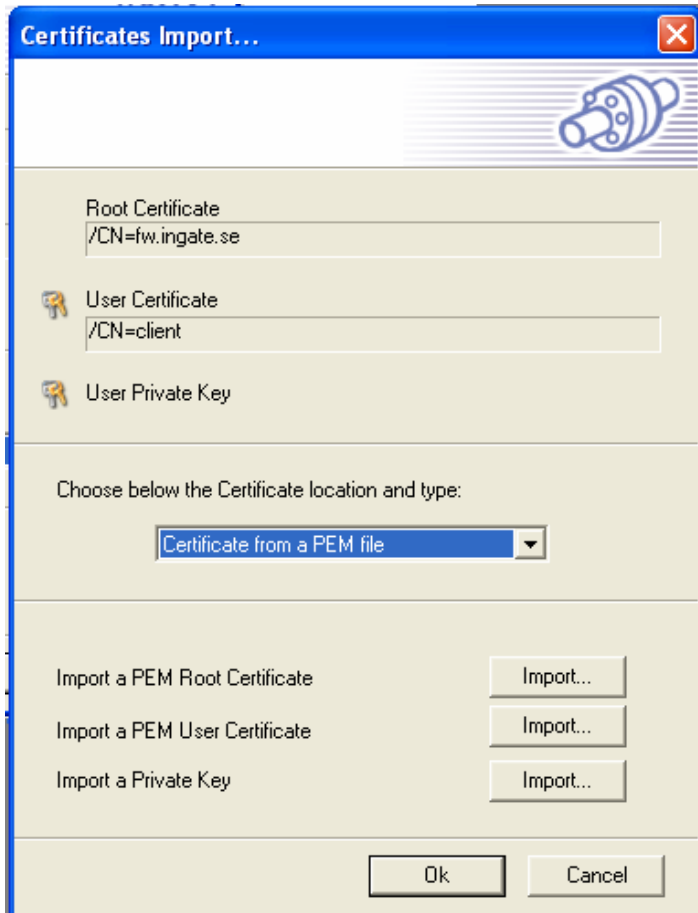

Import a User Certificate

Select "Certificate from a PKCS#12 file" to import the client certificate. Select the "client.p12" certificate you saved before.

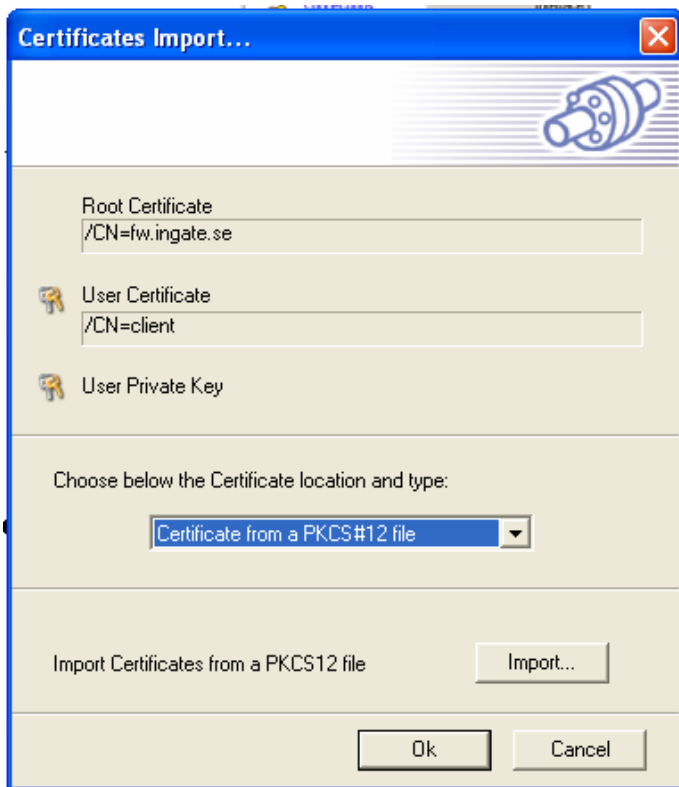


The client's certificate should also be uploaded as an X509 certificate to the Ingate for this specific peer. At the Ingates "IPsec Peers" page, set Authentication type to "X.509 certificate" and click change/view button to get to the "Upload Certificate" page. Select the "client.cer" file you saved before.

2.4 Advanced (important!)

Local ID Value: Enter what was used as the DN (Distinguished Name) for your client certificate. This is the fields you filled in when creating the certificate. Use "/" as separator between the fields.

Local ID Type: Select "DER ASN1 DN".

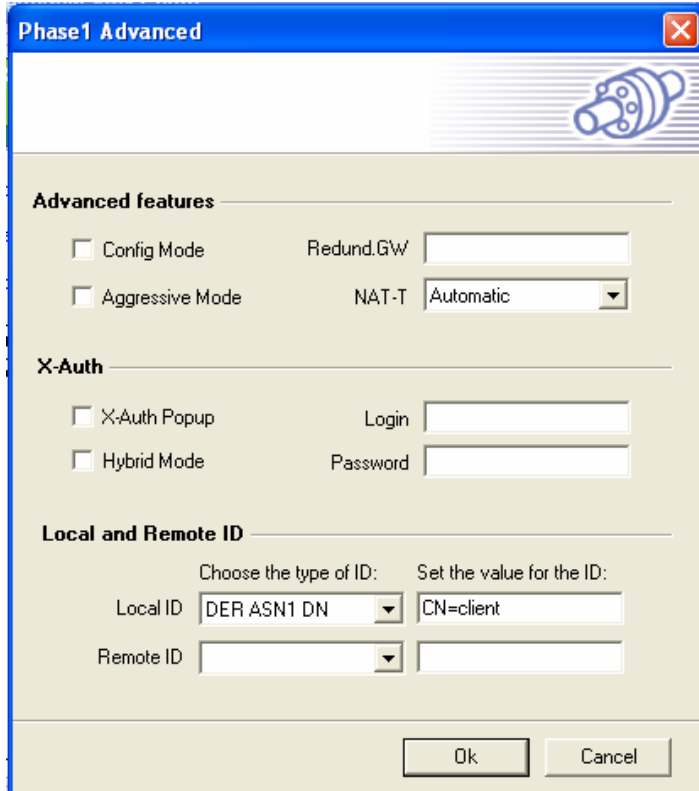

2.5 Add "Phase 2"

Right click on "Phase 1" config and select "Add Phase 2"

Name

Give this a suitable name


VPN Client Address

Leave as is (0.0.0.0) if no special type is needed.

Address type

If this tunnel is connected to a subnet (check this in your Ingate under VPN -> IPSec-Tunnels "Local Network" for this tunnel) then you should select "Subnet Address" and enter the exakt networks that are located in your Firewall's "Local Network".

If this tunnel is connected to a single address (check this in your Ingate under VPN -> IPSec-Tunnels "Local Network" for this tunnel) then you should select "Single Address" and enter the exakt networks that are located in your Firewall's "Local Network".

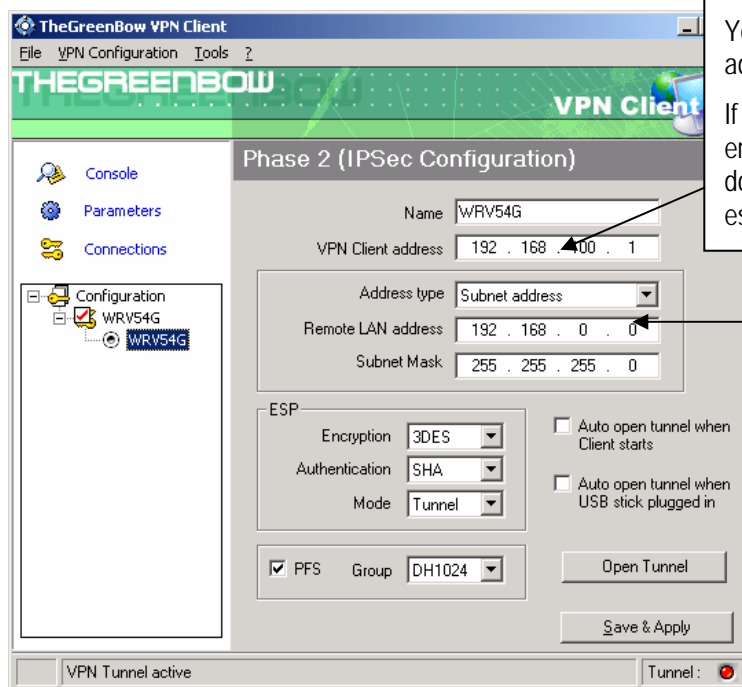

You may define a static virtual IP address here.

If you use 0.0.0.0, you will have error "Local-ID" is missing. It does not prevent you from establishing a tunnel

Enter the IP address (and subnet mask) of the remote LAN.

ESP

Encryption: Select 3DES or AES 256.

Authentication: Select SHA or MD5.

Mode: Tunnel.

PFS

PFS: Must be selected

Group: Select DH1024 or DH2048.

Save & Apply

2.6 Open IPSec VPN tunnels

Once both INGATE FIREWALL router and TheGreenBow IPSec VPN Client have been configured accordingly, you are ready to open VPN tunnels. First make sure you enable your firewall with IPSec traffic.

1. Click on "**Save & Apply**" to take into account all modifications we've made on your VPN Client configuration
2. Click on "**Open Tunnel**", or generate traffic that will automatically open a secure IPSec VPN Tunnel (e.g. ping, IE browser)
3. Select "**Connections**" to see opened VPN Tunnels
4. Select "**Console**" if you want to access to the IPSec VPN logs and adjust filters to display less IPSec messaging. The following example shows a successful connection between TheGreenBow IPSec VPN Client and a Microsoft Windows 2000 Server.

Doc.Ref	tgbvpn_ug_INGATE FIREWALL_en
Doc.version	2.0 – Feb.2005
VPN version	2.5x

No. .	Time	Source	Destination	Protocol	Info
1	0.000000	192.168.1.3	192.168.1.2	ISAKMP	Identity Protection (Main Mode)
2	0.153567	192.168.1.2	192.168.1.3	ISAKMP	Identity Protection (Main Mode)
3	0.205363	192.168.1.3	192.168.1.2	ISAKMP	Identity Protection (Main Mode)
4	0.257505	192.168.1.2	192.168.1.3	ISAKMP	Identity Protection (Main Mode)
5	0.300882	192.168.1.3	192.168.1.2	ISAKMP	Identity Protection (Main Mode)
6	0.310186	192.168.1.2	192.168.1.3	ISAKMP	Identity Protection (Main Mode)
7	0.313742	192.168.1.3	192.168.1.2	ISAKMP	Quick Mode
8	0.321913	192.168.1.2	192.168.1.3	ISAKMP	Quick Mode
9	0.323741	192.168.1.3	192.168.1.2	ISAKMP	Quick Mode
10	0.334980	192.168.1.2	192.168.1.3	ISAKMP	Quick Mode
11	0.691160	192.168.1.3	192.168.1.2	ESP	ESP (SPI=0x919bfabc)
12	1.692568	192.168.1.3	192.168.1.2	ESP	ESP (SPI=0x919bfabc)
13	1.693164	192.168.1.2	192.168.1.3	ESP	ESP (SPI=0x53a5925e)
14	2.693600	192.168.1.3	192.168.1.2	ESP	ESP (SPI=0x919bfabc)
15	2.694026	192.168.1.2	192.168.1.3	ESP	ESP (SPI=0x53a5925e)

.....

⊞ Frame 1 (142 bytes on wire, 142 bytes captured)

⊞ Ethernet II, Src: 00:50:04:ad:f2:73, Dst: 00:10:b5:07:2f:ff

	Doc.Ref	tgvpn_ug_INGATE FIREWALL_en
	Doc.version	2.0 – Feb.2005
	VPN version	2.5x

3 Tools in case of trouble

Configuring an IPSec VPN tunnel can be a hard task. One missing parameter can prevent a VPN connection from being established. Some tools are available to find source of troubles during a VPN establishment.

3.1 A good network analyser: ethereal

Ethereal is a free software that can be used for packet and traffic analysis. It shows IP or TCP packets received on a network card. This tools is available on website <http://www.ethereal.com/>. It can be used to follow protocol exchange between two devices. For installation and use details, read its specific documentation.

	Doc.Ref	tgvpn_ug_INGATE FIREWALL_en
	Doc.version	2.0 – Feb.2005
	VPN version	2.5x

4 VPN IPsec Troubleshooting

4.1 « PAYLOAD MALFORMED » error (wrong Phase 1 [SA])

```

114920 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [SA][VID]
114920 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [NOTIFY]
114920 Default exchange_run: exchange_validate failed
114920 Default dropped message from 195.100.205.114 port 500 due to notification
type PAYLOAD_MALFORMED
114920 Default SEND Informational [NOTIFY] with PAYLOAD_MALFORMED error

```

If you have an « PAYLOAD MALFORMED » error you might have a wrong Phase 1 [SA], check if the encryption algorithms are the same on each side of the VPN tunnel.

4.2 « INVALID COOKIE » error

```

115933 Default message_rcv: invalid cookie(s) 5918ca0c2634288f 7364e3e486e49105
115933 Default dropped message from 195.100.205.114 port 500 due to notification
type INVALID_COOKIE
115933 Default SEND Informational [NOTIFY] with INVALID_COOKIE error

```

If you have an « INVALID COOKIE » error, it means that one of the endpoint is using a SA that is no more in use. Reset the VPN connection on each side.

4.3 « no keystate » error

```

115315 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [SA][VID]
115317 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [SA][VID]
115317 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [KEY][NONCE]
115319 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [KEY][NONCE]
115319 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [ID][HASH][NOTIFY]
115319 Default ipsec_get_keystate: no keystate in ISAKMP SA 00B57C50

```

Check if the preshared key is correct or if the local ID is correct (see « Advanced » button). You should have more information in the remote endpoint logs.

4.4 « received remote ID other than expected » error

```

120348 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [SA][VID]
120349 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [SA][VID]
120349 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [KEY][NONCE]
120351 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [KEY][NONCE]
120351 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [ID][HASH][NOTIFY]
120351 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [ID][HASH][NOTIFY]
120351 Default ike_phase_1_rcv_ID: received remote ID other than expected
support@thegreenbow.fr

```

The « Remote ID » value (see « Advanced » Button) does not match what the remote endpoint is expected.

4.5 « NO PROPOSAL CHOSEN » error

```

115911 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [SA][VID]
115913 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [SA][VID]
115913 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [KEY][NONCE]
115915 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [KEY][NONCE]
115915 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [ID][HASH][NOTIFY]
115915 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [ID][HASH][NOTIFY]
115915 Default phase 1 done: initiator id c364cd70: 195.100.205.112, responder id
c364cd72: 195.100.205.114, src: 195.100.205.112 dst: 195.100.205.114
115915 Default (SA CNXVPN1-CNXVPN1-P2) SEND phase 2 Quick Mode
[SA][KEY][ID][HASH][NONCE]
115915 Default RECV Informational [HASH][NOTIFY] with NO_PROPOSAL_CHOSEN error
115915 Default RECV Informational [HASH][DEL]
115915 Default CNXVPN1-P1 deleted

```

If you have an « NO PROPOSAL CHOSEN » error, check that the « Phase 2 » encryption algorithms are the same on each side of the VPN Tunnel.

Check « Phase 1 » algorithms if you have this:

```

115911 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [SA][VID]
115911 Default RECV Informational [NOTIFY] with NO_PROPOSAL_CHOSEN error

```

4.6 « INVALID ID INFORMATION » error

```

122623 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [SA][VID]
122625 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [SA][VID]
122625 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [KEY][NONCE]
122626 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [KEY][NONCE]
122626 Default (SA CNXVPN1-P1) SEND phase 1 Main Mode [ID][HASH][NOTIFY]
122626 Default (SA CNXVPN1-P1) RECV phase 1 Main Mode [ID][HASH][NOTIFY]
122626 Default phase 1 done: initiator id c364cd70: 195.100.205.112, responder id
c364cd72: 195.100.205.114, src: 195.100.205.112 dst: 195.100.205.114
122626 Default (SA CNXVPN1-CNXVPN1-P2) SEND phase 2 Quick Mode
[SA][KEY][ID][HASH][NONCE]
122626 Default RECV Informational [HASH][NOTIFY] with INVALID_ID_INFORMATION error
122626 Default RECV Informational [HASH][DEL]
122626 Default CNXVPN1-P1 deleted

```

If you have an « INVALID ID INFORMATION » error, check if « Phase 2 » ID (local address and network address) is correct and match what is expected by the remote endpoint.

Check also ID type ("Subnet address" and "Single address"). If network mask is not check, you are using a IPV4_ADDR type (and not a IPV4_SUBNET type).

4.7 I clicked on "Open tunnel", but nothing happens.

Read logs of each VPN tunnel endpoint. IKE requests can be dropped by firewalls. An IPSec Client uses UDP port 500 and protocol ESP (protocol 50).

4.8 The VPN tunnel is up but I can't ping !

If the VPN tunnel is up, but you still cannot ping the remote LAN, here are a few guidelines:

- Check Phase 2 settings: VPN Client address and Remote LAN address. Usually, VPN Client IP address should not belong to the remote LAN subnet
- Once VPN tunnel is up, packets are sent with ESP protocol. This protocol can be blocked by firewall. Check that every device between the client and the VPN server does accept ESP
- Check your VPN server logs. Packets can be dropped by one of its firewall rules.
- Check your ISP support ESP

Doc.Ref	tgvpn_ug_INGATE FIREWALL_en
Doc.version	2.0 – Feb.2005
VPN version	2.5x

- If you still cannot ping, follow ICMP traffic on VPN server LAN interface and on LAN computer interface (with Ethereal for example). You will have an indication that encryption works.
- Check the "default gateway" value in VPN Server LAN. A target on your remote LAN can receive pings but does not answer because there is a no "Default gateway" setting.
- You cannot access to the computers in the LAN by their name. You must specify their IP address inside the LAN.
- We recommend you to install ethereal (<http://www.ethereal.com>) on one of your target computer. You can check that your pings arrive inside the LAN.

	Doc.Ref	tgbvpn_ug_INGATE FIREWALL_en
	Doc.version	2.0 – Feb.2005
	VPN version	2.5x

5 Contacts

News and updates on TheGreenBow web site : <http://www.thegreenbow.com>

Technical support by email at support@thegreenbow.com

Sales contacts at +33 1 43 12 39 37 ou by email at info@thegreenbow.com